
F I G. 1

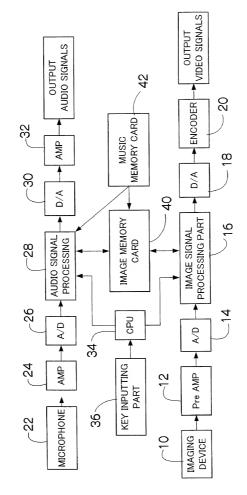

F I G. 2 **ACTIVATE** S10 NO RECORD MODE? S14 YES NO IMAGE CARD? S16 YES NO MUSIC CARD? -S22 YES KEY NO MUSIC? INPUT S24 YES KEY SELECT TUNE INPUT S26 DETERMINE KEY MIXING RATIO INPUT S18 RELEASE S28 RELEASE SHUTTER SHUTTER S30 S20 RECORD IMAGE AND MUSIC RECORD S12 IMAGE AND AUDIO NO RECORDING

WAITING FOR KEY INPUT